



USER MANUAL


EGO

**Universal 4 channels multifrequency transmitter
(433,92 MHz to 868,80 MHz)**

For the latest instructions
visit our website at www.abtecono.com



GENERAL INFORMATION

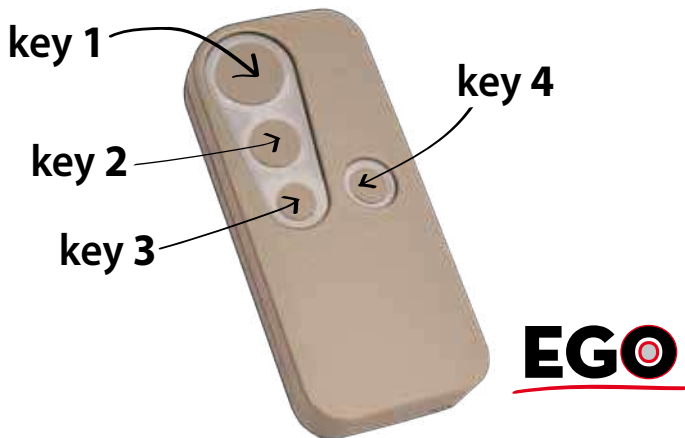

Seed code (hidden button)

Press and hold key 3, then press and hold key 4. The red led will light steady. Release both keys and press the key which source code is needed.

HOW TO GENERATE A ROLLING CODE IF ORIGINAL TRANSMITTER IS LACKING

- 1) Press and hold key 2 and 3 for at least 3 seconds until the green led starts to blink faster, then release.
 - 2) Press the key on which you want to store the new code a number of times equal to **N** value indicated in the tables below. The led blinks 3 times for confirmation.
- In order to generate another code on a different channel please repeat step 2 within 3 seconds

EGO

PRODUCER	N	PRODUCER	N
BFT	N1	SEAV 868MHz	N15
NICE Smilo	N2	ACM	N16
APRIMATIC	N3	GENIUS RC	N17
BENINCÀ	N4	GENIUS	N18
DEA	N5	CARDIN FM	N19
GiBiDi	N6	GENIUS BRAVO	N20
FADINI	N7	NORMSTAHL	N21
FAAC RC-LC	N8	PUJOL	N22
SOMMER Chiave-1 434MHz	N9	V2 433MHz	N23
SOMMER Chiave-2 434MHz	N10	V2 868MHz	N24
SOMMER Chiave-1 868MHz	N11	O&O 433MHz	N25
SOMMER Chiave-2 868MHz	N12	O&O 868MHz	N26
MHOUSE	N13	NOVOFERM	N27
SEAV 433MHz	N14		

EGO32

PRODUCER	MODEL	N
NICE	FLO2R, FLO4R, VERY VR, ERA-INTI2, ERA-ONE2/4	N1
LIFTMASTER 433		N2
LIFTMASTER 315		N3
PRASTEL	TC4E, BFOR, MPSTL1E, MPSTL2E, MPSTL4E, MPSTP2E, MPSTP2	N4
KINGATES	STILO-4, CLIPPER	N5
DITEC	GOL4, BXLG4, BXL P2, BXL S2	N6
TELCOMA FM		N7
ERONE 433		N8
ERONE 868		N9
SILVELOX		N12
DOORHAN		N13

The programming of EGO transmitter on the receiver is mandatory. For the correct procedure please refer to receiver manufacturer instructions.

DOUBLE CLICK MODE

Double click mode has the purpose to avoid unwanted activations of the transmitter and is switched off by default.

When switched on requires to press the key twice and hold for at least 2 seconds for the transmitter to work.

Switch ON: press and hold key 4, then press key sequence 3, 2, 1. Green led will blink once.

Switch OFF: press twice and hold key 4 then press key sequence 3,2,1. Red led will blink once.

ROLLING CODE TRANSMITTERS COMPATIBILITY TABLES

ROLLING CODE GROUP 1 **EGO**

PRODUCER	MODEL	PHOTO
ACM	TX2 COLOR	
ADYX/GENIUS	TE4433H BLUE, BRAVO TE 4433H, ECHO TX4	
ALLMATIC	BRO4WN, BRO4W RED, BROOVER, BROSTAR, MINI PASS, TECH3	
APRIMATIC	TM4, TR2, TR4, TX2, TX4M	
BENINCA	APPLE4WW, CUPIDO2, CUPIDO4, IO, T2, T4WV, TO-GO2, TO-GO 4WV	
DEA	MIO TR2, MIO TR4, GENIE-R W	
FAAC 433	XT4 433 RC	
FADINI	JUBY SMALL, JUBY433	
GENIUS/CASALI	252, 252 NEW, 254, 254 NEW	
GibiDi	AU1600, AU1610, AU1680, AU1810, DOMINO	
MHOUSE	GTx4, MT4, TX3, TX4	
MOOVO	MT4, MT4G, MT4V	
NICE	SMILO	
NORMSTAHL/ CRAWFORD	433-2K, 433-4K, EA433 2K, EA433 4K, EA433 2KM, T4334	
PUJOL	VARIO BLACK, VARIO3 OCEAN, VARIO P2153	
SEAV	BE GOOD RH1, BE HAPPY RH1, RH2, RH3, RS1, RS2, RS3	
V2	PHOENIX, PHOX, TRC4, HANDY	

ROLLING CODE GROUP 2 (FAAC E GENIUS) **EGO**

PRODUCER	MODEL	PHOTO
FAAC	DL2 868 SLH, DL4 868 SLH, T2, T4, TML2 SLH, TML4 SLH, XT2 SLH, XT4 SLH	
GENIUS	AMIGO JA 332, AMIGO JA 334, KILO TX2, KILO TX4	

ROLLING CODE GROUP 2 (BFT) **EGO**

PRODUCER	MODEL	PHOTO
BFT	KLEIO TX2, KLEIO TX4, MITTO 2, MITTO 4, RB, RCB2, RCB4, TRC2, TRC4, TX2, TX4	

ROLLING CODE GROUP 3 **EGO**

PRODUCER	MODEL	PHOTO
CARDIN	S449QZ, S437TX	
SOMMER/ APERTO FM	4013, 4013TX, 4014, 4020, 4022TX, 4025, 4026	

ROLLING CODE GROUP 1 **EGO32**

PRODUCER	MODEL	PHOTO
LIFTMASTER 433	94335E, 84335EML, 94335E-OLD	
LIFTMASTER 315/390	371LM, 370LM, 372LM 373LM, 374LM, 312HM/C, 412HM/C	
SILVELOX	ECO-TSM2, 3400155	
DOORHAN	T4	
ERONE 433/868	SERIE 07, FLAT, MINI, STANDARD	

ROLLING CODE GROUP NICE **EGO32**

PRODUCER	MODEL	PHOTO
NICE	FLO2R, FLO4R, VERY VR, ERA-INTI2, ERA-ONE2/4	

ROLLING CODE GROUP DITEC **EGO32**

PRODUCER	MODEL	PHOTO
DITEC	GOL4, BXLG4, BXL2P, BXL52	

ROLLING CODE GROUP PRASTEL **EGO32**

PRODUCER	MODEL	PHOTO
PRASTEL	TC4E, BFOR, MPSTL1E, MPSTL2E MPSTL4E, MPSTP2E, MPSTP2	

ROLLING CODE GROUP 3 **EGO32**

PRODUCER	MODEL	PHOTO
TELCOMA FM	FM402, FM402E, FM404E	

Photos are the copyrighted property of their respective owners.

FIXED CODE TRANSMITTERS COMPATIBILITY TABLES (EGO / EGO32)

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
ADYX	433.920	ALIZE EM2C, ALIZE EM4C	
AETERNA	433.920	TX433 1,2,4 buttons	
ALLMATIC	306.000	ASMX2, ASMX4	
ALLMATIC	433.920	AEMX1, AEMX2, AEMX4	
ALLMATIC	433.920	EUROPE AUTO ARMY2, ARMY1, ARMY4	
ALLMATIC	433.920	MX1, MX2, MX4	
ALLISTER	318.000	9931-318, 9931T-318	
ALLSTAR	288.000	111025 Allister Pulsar Quickcode	
ALLSTAR	288.000	9921T-288, 9921MT, 9921TK, 9922T-288, 9923T-288, 9931-288, 9931TK, 9931TK6, 8831T-288, 8832T-288, 8833T-288, 8821T-288, 8822T-288, 8823T-288, 8832TK	
ALLSTAR	288.000	8833OCS-288	
ALLSTAR	318.000	9921T-318, 9921MT, 9921TK, 9922T-318, 9923T-318, 9931-318, 9931TK, 9931TK6, 8831T-318, 8832T-318, 8833T-318, 8821T-318, 8822T-318, 8823T-318, 8832TK	
ALLSTAR	318.000	110995 Allister Pulsar Quickcode	
ALLSTAR	318.000	8830OCS-318	
ALLTRONIC	433.920	S429_1, S429_2, S429_4, S429_M	
ALLTRONIC	433.920	S425	
ANSONIC	433.920	SA 434-1E, SA434-2E, SA434-3E, SA434-4E	
ANSONIC	433.920	SA 434-1MINI, SA434-2MINI, SA 434-2Midi	
ANSONIC	868.350	SA 868-1E, SA 868-2E, SA868-3E, SA868-4E	
ANSONIC	868.350	SA 868-1mini/M, SA 868-2mini/M (dip switch version)	
APERTO	433.920	CPS1, CPS2, CPS4	
APRIMATIC	305.000	TS1, TS2	
AUTELCO	286-306	TX300T	

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
AVIDSEN	433.920	100601 micromark MM23164	
AVIDSEN	433.920	104505	
AVIDSEN	433.920	100951, 100955, 100550, 100400	
B&D BnD BD	433.920	062170/4333EBD, 062171, 43333*	
B&D BnD BD	433.920	062162	
B&D BnD BD	433.920	PTX4 059120 / 059116	
B&D	433.920	062170/4333EBD 1A4982 10 trinary	
BANDY	433.920		
BELFOX	433.920	DHS433-1, DHS433-2, DHS433-4, dip switch version	
BELFOX	433.920	DHS 433,92 (7733), dip switch version	
BELFOX	868.350	DHS 868,3, dipswitch version	
BELFOX	868.350	HS 868-20	
BENINCA'	306.000	LOT1A, LOT2A, LOT4A	
BENINCA'	306.000	LOTX1A, LOTX2A, LOTX4A	
BENINCA'	306.000	LO.TX2PS	
BENINCA'	433.920	LOT1W, LOT2W, LOT4W	
BENINCA'	433.920	LOT2WMS	
BENINCA'	433.920	T2WK, T4WK	
BENINCA'	433.920	LOTX1W, LOTX2W, LOTX4W	
BENINCA'	433.920	TO.GO2WP, TO.GO4WP, TO.GO2WK, TO.GO4WK	
BERNER	868,300	Berner BHS140	
BERNER	868,300	Berner BHS130	
BESIDE	433.920	BEZAP	
BESIDE	433.920	HIT	
BETA ELETTRONICA	330.000	BETALARM 5500	
BETA ELETTRONICA	315,00	BETALARM 6500	

MARCA/BRAND	FREQUENZA	MODELLO	FOTO
BFT	306.000		
BFT	315.000	VTM1, VTM2, VTM4	
BFT	418.000	GT01, GT02, GT04	
BFT	433.920	TE01, TE02 (TEO1, TEO2)	
BFT	433.920	TE04 (TEO4)	
BFT	433.920	MITTO 2/4 TRC2/4	
BFT	433.920	MITTO 2, MITTO 4: Solo se il ricevitore è CLONIX1 o CLONIX 2 con DIP2 in posizione ON	
CAME	315.000	TOP312, TOP314	
CAME	315.000	TOP432NA, TOP434NA	
CAME	433.920	T432, T434, TOP432A, TOP434A, TOP432, TOP434NA	
CAME	433.920	TOP432M, TOP434M	
CAME	433.920	TAM432SA	
CAME	433.920	TOP432SA	
CAME	433.920	TOP432NA	
CAME	433.920	TWIN2, TWIN4	
CAME	433.920	CAME TOP-432EV, TOP-434EV	
CAME	868,350	CAME TOP862NA, TOP864NA	
CARDIN	300.000	S300	
CARDIN	310.000	S301, S302	
CARDIN	433.920	S438-2	
CARDIN	433.920	S476 TX2, S476TX	
CARPER	300.000 310.000 318.000	C300, C310, C318, C318T	
CASALI GENIUS	330.000		
CASALI GENIUS	433.920	enius 433 2, Genius 433 3, JA400 TM433, JA401 TM433	
CASIT	306.000	ERTS92B, ERTS92T	
CASIT	433.920	ERTS92B, ERTS92T	

MARCA/BRAND	FREQUENZA	MODELLO	FOTO
CASIT	433.920	ERTS20DB, ERTS20DQ	
CASIT	433.920	ERTS476D, ERTS476Q	
CASIT	433.920	TXS1, TXS2, TXS3, TXS4, TXS6 ERTS97B, ERTS97T	
CELINSA	433.920	S10 1, S10 2, SAW1, SAW2	
CENTURION	433.920	CLASSIC, SMART, SMART2	
CHAMBERLAIN LIFTMASTER MOTORLIFT SEARS CRAFTSMAN	300.000	Chamberlain 300MC (multicode)	
CHAMBERLAIN LIFTMASTER MOTORLIFT SEARS CRAFTSMAN	315.000	333LM 360LM, 362LM, 363LM	
CHAMBERLAIN LIFTMASTER MOTORLIFT SEARS CRAFTSMAN	390.000	50CB, 53CB, 750CB, 753CB, 50LM, 53LM, 61LM, 62LM, 63LM, 139.53100, 139.53110, 139.53200, 139.53210 54CB, 756CB, 54LM, 64LM, 859CB 850CB, 853CB, 959CB, 81LM, 82LM, 83LM, 84LM, 99LM 33LM	
CHAMBERLAIN LIFTMASTER MOTORLIFT SEARS CRAFTSMAN	418.000	4180, 4182, 4183 4185 787 remote keyless entry	
CHAMBERLAIN LIFTMASTER MOTORLIFT SEARS CRAFTSMAN	433.920	4330E, 4332E, 4333E 4335E	
CPS	433.920	TCP3, CPS, Jolly 4	
CPS	433.920	CPS1 TCP3, CPS2 TCP3, CPS4 TCP3 EM1CV, EM2CV, EM4CV	
CRAWFORD	433.920	TX-433	
DASPI	433.920	Happy2, Pops2A,	

Photos are the copyrighted property of their respective owners.

MARCA/BRAND	FREQUENZA	MODELLO	FOTO
DASPI	433.920	Daspi Zero2, Zero2CLO, Zero4CLO	
DEA	306.000	306 1, 306 2, 306 4	
DEA	306.000	306	
DEA	433.920	433 1, 433 2, 433 4	
DEA	433.920	Genie	
DEA	433.920	Punto S2	
DEA	433.920	Dea MIO TD2, MIO TD4	
DELMA	300.000	Apollo 300, ELSAMEC Apollo 300	
DELMA	300.000	Mizard 300 1, Mizard 300 2, King	
DELMA	433.920	Mizard 433 1, Mizard 433 2	
DELMA	433.920	King 433 2	
DELMA	433.920	Style Copy 2CH (this is a code duplicator)	
DICKERT	433.920	MAHS433 01, MAHS433 04 non possiamo garantire che può essere duplicato, poiche dipende dal ricevitore	
DICKERT	433.920	S10-433A1L00, S10-433A4L00, S20-433A1L00, S20-433A4L00, S20-433A1000, S20-433A4000 possono essere duplicati solo i modelli con pulsanti rossi	
DICKERT	433.920	S5-433-A2L00, S5U-433-A2L00 possono essere duplicati solo i modelli con pulsanti rossi	
DICKERT	868.350	HS868-21 possono essere duplicati solo i modelli con pulsanti rossi	
DICKERT	868.350	S5-868A2L00, S5U-868A2L00 possono essere duplicati solo i modelli con pulsanti rossi	
DICKERT	868.350	S10-868A100, S10-868A400, S20-868A1L00, S20-868A4L00, S20-868A1000, S20-868A4000 possono essere duplicati solo i modelli con pulsanti rossi	
DIGICODE	300.000 310.000	DCS5010, DCS5012, DCS5030, DCS5032, DCS5040, DCS5042, DCS5060, DCS5062, DCS5070, DCS5072	

MARCA/BRAND	FREQUENZA	MODELLO	FOTO
DITEC	433.920	GOL4C	
DOITRAND FDOITRAND	433.920	MPSTF2E JAUNE, MPSTF4E, HYPERPHONE MPSTF2E_GRISE	
DOITRAND FDOITRAND	433.920	TS2DE, TS4DE	
DOORHAN	433.920		
DOORMATIC	433.920	SAW	
DUCATI ALLDUCKS	433.920	TSAW1, TSAW2, TSAW3, TSAW4, 124 ELBER TSAW1, TSAW2, TSAW3, TSAW4 RONDY TSAW1, RONDY TSAW2, RONDY TSAW3	
DUCATI ALLDUCKS	433.920	TPR10-A, TPR20-A RONDY TPR10_A, RONDY TPR20_A	
DUCATI ALLDUCKS	433.920	TE2	
DUCATI ALLDUCKS	433.920	HC6203, 6203: only blue, red and transparent	
ELBE	433.920	501, 502, 504	
ELBE	433.920	502a, 504°	
ELBE	433.920	502,5	
ELCA	300.000	Aster 1100, Aster 1101	
ELCA	433.920	IRIS, IRIS 9CH. Both colors red and blu	
ELCA	433.920	ASTER2	
ELCA	433.920	Aster 1000, Aster1001. Colors: black, blue, light grey	
ELCA	433.920	GEMINI 9CH	
ELCA	433.920	VIRGO	
ECP	292.000	FIX 292 MHz F105611	
ECP	292.000	KEY 292 MHz F106038	
ELDAT MFZ	433.920	Eldat RT20-4103M-01, RT20-4104M-01, RT35-4104M-01, RT21-4101M-01, RT21-4102M-01	
ELDAT MFZ	433.920	Eldat RT28-4101M-01, RT27-4101M-01, RT26-4101M-02, RT21-4125M-01, RT21-4139M-01, RT21-4139M-02, RT31-4139M-01, RT31-4139M-02, RTC02-4104M-01	

Photos are the copyrighted property of their respective owners.

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
ELDAT MFZ	868,300	Eldat RT20-5004M-01, RT20-5003M-01, RT35-5004M-01, RT21-5001M-01, RT21-5002M-01	
ELDAT MFZ	868,300	Eldat RT28-5001M-01, RT27-5001M-01, RT26-5001M-02, RT21-5025M-01, RT21-5039M-01, RT21-5039M-02, RT31-5039M-01, RT31-5039M-02, RTC02-5004M-01	
ELEK	300.000	KTM194B	
ELEK	300.000	KTR4	
ELV CONRAD	868,350	FS20 S4, FS20 S8, FS20 S8-2, FS20 S16, FS20S16R, FS20 S20-2, FS20 S20-3	
ELVOX	433.920		
ELVOX	433.920	ET03, ET04	
ELVOX	868.350	ET08	
EMFA	287.000	ET1, ET2, ET3	
EMFA	308.000	ES_1, ES_2	
ERONE	433.920	SETDS39433E2, SETDS39433E4	
ERREKA	289.000	Erreka E20, Erreka E22	
ERREKA	433,920	Erreka Luna, Erreka SMAT 1 RESON 1, RESON 2, RESON 3	
EUROPE AUTOMATISMES	306,000	ASMY1, ASMY2, ASMY4	
EUROPE AUTOMATISMES	433,920	ASMY1, ASMY2, ASMY4	
EUROPE AUTOMATISMES	433,920	S1, S2, S3	
FAAC	300,00	TM300S, TM300S05 H	
FAAC	315.000	T1, T2, T3	
FAAC	330.000	TM1, TM2, TM3	
FAAC	418.000	TM1 418 DS, TM2 418 DS, TM3 418 DS	
FAAC	418.000	TM 418SL, TM1 418SL, TM2 418 SL, TM3 418SL	
FAAC	433.920	TM1 433 DS, TM2 433 DS, TM3 433 DS	
FAAC	433.920	TML2 433 SLR, TML4 433 SLR, TML2-433-SLR, TML4-433-SLR	
FAAC	433.920	TML2 433 SLP, TML4 433 SLP, TML2-433-SLP, TML4-433-SLP	

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
FAAC	868.350	TM1 868 DS, TM2 868 DS, TM3 868 DS	
FADINI/BPT	315.000	ASTRO75-1, ASTRO75-2, ASTRO75-4	
FADINI/BPT	433.920	433 2M, Astro43_2m	
FADINI/BPT	433.920	Astro433-2, Astro433-4, Astro43-2, Astro43-4	
FERPORT	433.920	Tac1, Tac2, Tac4, Tac1k, Tac2k, Tac4k, Tac2kr	
FUNKMODUL ELSECO	433,920	T433A2K1, T433A2K2	
FUNKMODUL ELSECO	433,920	T433A2K4, T433A2K4n	
GIBIDI	306.000	TS2M	
GIBIDI	433.920	Open TMB 433, OPEN TMQ 433, OPEN OUT 2, OPEN OUT 4	
GOBBATO	306.000	T306	
GRIFFON	433,920	Griffon 433 MHz dip switch remotes and duplicating remotes	
GRIFFON	403,550	Griffon 404 MHz dip switch remotes and duplicating remotes	
GTO	318.000	GTO Mighty Mule 1/2 buttons, RB741, RB742	
GTO	318.000	GTO Mighty Mule 3 buttons, RB743	
GULLIVER	306.000	MDRQ 306	
GULLIVER	433.920	MDW 2E	
HAUSS	433.920	Pocket 3750-1, Pocket3750-2, Pocket 3750-4	
HEDDOF	318.000	P219-1, P219-2	
HEDDOF	318.000	P220-1, P220-2, P220-3	
HORMANN HOERMANN HOERMANN	433.920	HSM2, HSM4, yellow buttons Please note that, in Netherlands, Hoermann sell this kind of remote control which transmit a rolling code: in this case it cannot be duplicated!	
HORMANN HOERMANN HOERMANN	868.300	HS1, HS2, HS4, blue buttons	
HORMANN HOERMANN HOERMANN	868.300	HSD2	
HORMANN HOERMANN HOERMANN	868.300	HSE2, HSE4, blue buttons	

Photos are the copyrighted property of their respective owners.

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
HORMANN HOERMANN HÖERMANN	868.300	HSM2, HSM4, blue buttons	
HORMANN HOERMANN HÖERMANN	868.300	HSP4, blue buttons	
HORMANN HOERMANN HÖERMANN	868.300	HSS2, HSS4, blue buttons	
HORMANN HOERMANN HÖERMANN	868.300	HSZ1-868, HSZ2-868	
HORMANN HOERMANN HÖERMANN	433,920	RS2-433, RS4-433 (Rolling code versions, usually sold in Netherlands)	
JAY	433,920	UBEL x1 SL1	
JAY	433,920	UBET 11, UBET 21, UBET 31, UBET 41, UBET 61Å,	
JCM	290.000	ET1, ET2, ET3	
KEY AUTOMATION	433,920	900TXB-42, 900TXB-42N, 900TXP-42, 900TXP-42N	
KEY AUTOMATION	433,920	900TXB-44, 900TXG-44	
KEY AUTOMATION	433,920	900SUB-44, 900SUB-44N, 900SUB-44W, 900SUB-44WN	
KEY AUTOMATION	433,920	900TXK-42, 900TXW-42, 900TXK-44, 900TXW-44	
LABEL IUPPITER	306.000	MDR, IUPPITER 306	
LABEL IUPPITER	433,920	RJW/1E, RJW/2E, RJW/4E, RJW/12E	
LABEL IUPPITER	433,920	MDW/1E, MDW/2E	
LEB	306.000	TSA4	
LEB	433,920	TMW	
LEB	433,920	TSAW2N, TSAW4N	
LEB	433,920	TCP3Å, (this is a code duplicator)	
LEB	433,920	TRK4 Note: receiver should be configured to disable rolling check.	
LEB	433,920	TPW4	
LEB	868.300	TPK4	

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
LINEAR	300.000 310.000	MULTI-CODE 308911, 308913, 1089	
LINEAR	300.000 310.000	MULTI-CODE 412001, 414001, 109410, 109710	
LINEAR	300.000 310.000	MULTICODE 306010, 307010, 108210	
LINEAR	300.000 310.000	MULTI-CODE 308301, 308302	
LINEAR	300.000 310.000	MULTI-CODE 105015	
LINEAR	310.000	Delta3 Moore-o-Matic: DT, DT2, DT2A, DT22A, DTC, DTD	
LINEAR	310.000	Delta 3 Moore-o-Matic: DT3, DT4	
LINEAR	310.000	Delta 3 Moore-o-Matic: Mini-T LB "LadyBug"	
LINEAR	312.000	Delta3 DTK (canada)	
MA SYSTEM	433,920	MA TX1, MA TX2, MA TX3	
MARANTEC	418.000	D212, D222, D232	
MARANTEC	433,920	D101	
MARANTEC	433,920	D12	
MARANTEC	433,920	D212, D222, D232	
MARANTEC	433,920	Digital 302, D302	
MARANTEC	433,920	Digital 304, D30	
MARANTEC	868.300	Digital 302, D302	
MARANTEC	868.300	Digital 304, D304	
MCZ	433,920	Aster	
MeiBner MEISSNER	433,920	LW433-1, LW433-2, LW433-4	
MeiBner MEISSNER	433,920	Pocket 3750 1, 2, 4	
MONSEIGNEUR	433,920	ARC2, ARC4	
MONSEIGNEUR	433,920	TDR 400 3845, TDR 400 3846, TDR 400 3847 T1SAW433, T2SAW433, T4SAW433	
MKTECHNO MK-TECHNO	306,00	MK-TECHNO TX1 and MKTECHNO TX2 with RED LED	

Photos are the copyrighted property of their respective owners.

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
MOTORLINE STATEURO P	433.920	MX1, MX2, MX3, MX4, MX6 MX11, MX12, MX13	
MOTOSTAR	433.920	CLIKSTAR2, CLIKSTAR4 CLICK-4M, CLICKSTAR RE 532, CLICKSTAR RE 534	
NICE	306.000	EASY S1, S2, S4	
NICE	433.920	FLO1, FLO2, FLO4	
NICE	433.920	VERY VE	
NICE	433.920	SMILO SM2, SM4	
NOLOGO	306.000		
NOLOGO	433.920	ECO DIP	
NOVOTECNICA	306.000	BIT N1, BIT N2	
NOVOTECNICA	306.000	BIT NT1, BIT NT2, BIT NT4	
O&O OeO, O and O	433.920	T-COM DS 4-2, T-COM DS 4-4	
O&O OeO, O and O	433.920	OeO TX4-E, TX2-E (red buttons)	
O&O OeO, O and O	306.000	OeO TX2, TX4 (green buttons)	
OPENOUT	306.000	TS2M	
OPENOUT	433.920	TMQ 433 2, TMQ 433 4	
PIAZZETTA	433.920	4 buttons for wood/pellet heater	
PORTAMATIC	433.920	MPH01, MPH02	
POWERFIX Profi (Lidl)	433.920	RCB-A 3600R	
PRASTEL	306.000	NCSMT1, NCSMT2P, NCSMT4P	
PRASTEL	306.000	KMFT2P, KMFT4P, KMFT2P93, KMFT4P93	
PRASTEL	433.920	MPSTF2E, MPSTF4E	
PROEM	433.920	ER2C4ACM, ER4C4ACM	
PROGET	433.920	ETY_433N2, ETY 433N4	
PROGET	433.920	EMI433-N2	

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
PROTECO	433.920	TX433	
PROTECO	433.920	EUROMATIC	
PROTECO	433.920	HIT	
PUJOL	288.000	JCM TRINARIO 1, TRINARIO 2, TRINARIO 3	
PUJOL	288.000	TT1, TT2, TRINARIO 1, TRINARIO 2	
PULSAR	318.000	9931-318, 9931T-318	
QUASAR	287.000	Tx SA4, Serie Argento, SA	
QUASAR	287.000	TXSA2T	
QUASAR	306.000	300 2, 300 4	
QUASAR	433.920	433 TANGO SLIM BLEU	
QUICK	433.920	Model: 302	
RIB	433.920	MOON-433	
RIB	433.920	cod 433-1/2/3	
RIB	433.920	Sun	
ROGER	433.920	R80/TX12, R80/TX14, R80/TX12R, R80/TX14R	
ROGER	433.920	H80/TX22	
ROGER	433.920	G80/TX32, G80/TX34, G80/TX32R, G80/TX34R	
SEA	433.920		
SEA	433.920	SMART433_TX2_DIP, SMART433_TX3_DIP SMART433_TX2_COPY,SM ART433_TX3_COPY Smart2 Dip Switch, Smart3 Dip Switch	
SEA	868.350	Z31103, SEA868_4	
SEA	868.350	Z31103, Head2 Dip Switch	
SEA	868.350	SMART868-TX2-DIP, SMART868-TX3-DIP Smart2 Dip Switch, Smart3 Dip Switch	
SEAV	306/330	TX1, TX2, TX3, TX4, TX1/330 TX2/330, TX3/330, TX4/330	
SEAV	433.920	TXS1, TXS2, TXS3, TXS4	
SEAV	433.920	Behappy S1, Behappy S2, Behappy S3	

Photos are the copyrighted property of their respective owners.

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
SEAV	433.920	Be Easy TX, Be Easy Murale2	
SEAV	433.920	BeSmart S2, BeSmart S4	
SEAV	433.920	BeFree S1	
SEAV	868.300	BeSmart H2, BeSmart H4	
SEAV	868.300	BeFree H1	
SECURVERA	433.920	SV R2C	
SECURVERA	433.920	SV R4C	
SECURVERA	433.920	SV R6C	
SECURVERA	433.920	SV R2C	
SENDER	433.920		
SERAI	310.000	OG/32	
SERAI	433.920	OG/52, OG/54, OG/82, OG/84	
SERAI	433.920	OG/28, OG/48, OG/62, OG/64	
SERAI	433.920	OG/02, OG/04	
SICE	433.920	TX4 CLACK Bigfoot	
SILVELOX - INTRA	306,000	Green case with black buttons	
SILVELOX - INTRA	433,920	Silvelox Intra HSM4	
SIMBA	433,920	Simba RC1	
SIMINOR	433.920	ER2C4ACM, ER4C4ACM, ER2C4ACS, ER4C4ACS	
SKYLINK	300.000 310.000	MultiLink SD300M, Skylink 100, LD310M, SD310M	
SKYLINK	318.000	Skylink Mtilink PD-318M	
SKYLINK	390.000	Multilink CB-390M, CD-390M (versions compatible with Chamberlain)	
SMD	433.920	LW433-1, LW433-2, LW433-4 : AM models only	
SOMFY	433.920	LEB TMW	
SPARKRITE		SRA2-2	

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
STAGNOLI	433.920	ZEUS AZTR	
STAGNOLI	868.350	ZEUS AZTR	
STANLEY	310.000	24286	
STANLEY	310.000	1082	
STANLEY	310.000	1050	
STANLEY	310.000	1094	
STANLEY	310.000	1097	
STARTEC	433.920	TXQ2	
STINGER	300.000 310.000 318.000 390.000	300MCD21V, 300MCD22V, 310MCD21V, 310LID21V, 310LID22V, 318ALD31V, 390LMD21V, 390LMPB1V	 diff. colors
TAU	315.000	250 TXA2, 250 TXA4	
TAU	433.920	250 SLIM, 250K-SLIM, 250K-SLIMC	
TAU	433.920	250TXD2, 250TXD4	
TAU	433.920	250BUG2, 250BUG4	
TAU	433.920	250T-4, 250T-4C	
TEC KEY	300.000	MK1010	
TECNOMATIC	433.920	TQ433	
TECSEN BERNER GFA	433.920	SKX1MD, SKX2MD, SKX3MD, SKX4MD	
TECSEN BERNER GFA	433.920	SKX1KD, SKX2KD, SKX4KD, SKX6KD	
TECSEN BERNER GFA	433.920	SKX1DL, SKX2DL, SKX3DL, SKX4DL	
TECSEN BERNER GFA	433.920	SKX1LC, SKX2LC, SKX3LC, SKX4LC	
TECSEN BERNER GFA	433.920	SKX1SL, SKX2SL, SKX3SL, SKX4SL	
TECSEN BERNER GFA	433.920	SKJ	
TECSEN BERNER GFA	433.920	SKX1WD, SKX2WD, SKX4WD, SKX11WD, SKX22WD, SKX44WD	
TELCOMA	306.000	RCST2, RCST4	

Photos are the copyrighted property of their respective owners.

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
TELCOMA	433.920	TANGO 2 SW, TANGO4 SW	
TELCOMA	433.920	TANGO BLUE 2, TANGO 4 BLUE, TANGO BLEU 2, TANGO BLEU 4	
TELCOMA	433.920	TANGO 2 N, TANGO 4 N	
TELCOMA	433.920	TANGO 2 SLIM, TANGO 4 SLIM	
TELCOMA	433.920	Telcoma Noire2, Noire4 Note: Rolling-code jumper should be removed from the receiver!	
TELCOMA	433.920	TANGO WIN3	
TELCOMA	433.920	TANGO2, TANGO4	
TELCOMA	433,920	Telcoma EDGE 2, Telcoma EDGE 4	
TELEMATIC	300.000	TL1, TL2	
TKC	433.920	TSAW433	
TONKARR	287.000	TK2	
TORAG	433.920	S429 1, S429 2, S429 4	
TORMATIC DORMA	433.920	HS, Dorma HS43 1E, HS43 2E, HS43 3E, HS43 4E	
TORMATIC DORMA	433.920	MAHS, Siebau, Novoferm, Dorma	
TORMATIC DORMA	433.920	MHS, MHS43-1	
TREMA	433.920	TO93TV1, TO93TV2, TO93TV4	
TUBAUTO	433.920	DIGITAL 101 433	
V2	306.000	TRR1_306	
V2	318,000	TPS1K	
V2	433.920	MATCH	
V2	433.920	TCP3	
V2	433.920	TCP3, ARC3	
V2	433.920	TCP3	

MARCA/BRAND	FRECUENZA	MODELLO	FOTO
V2	433.920	TPR	
V2	433.920	T1SAW/433, T2SAW/433, T4SAW/433	
V2	433.920	TRR1, TRR2, TRR4	
V2	433.920	PMR2, PMR4	
VISONIC	315.000	WT100, WT100A, WT101, WT101A, WT102, WT104, WT-201, WT-201A, WT-201WP, WT-201AWP	
VISONIC	418.000	WT-100, WT-100A, WT-101, WT-101A, WT-102, WT-104, WT-201, WT-201A, WT-201WP, WT-201AWP	
VISONIC	433.920	WT 100, WT 100A, WT 101, WT 101A, WT 102, WT 104, WT 201, WT 201A, WT 201WP, WT 201AWP	
VSEG	433.920	CR SLIM	
WAINE-DALTON	433.920	S429-1, S429-2, S429-4, S429-mini	
WAINE-DALTON	433.920	S425	
WECLA CDS	433.920	433, 433_2	
ZULLAN	315.000	250TXA1H, 250TXA2H, 250TXA4H	
OEM	315.000		

Photos are the copyrighted property of their respective owners.

PROCEDURE TO STORE A ROLLING CODE TRANSMITTER - GROUP 1

**Compatibility table
ROLLING CODE GROUP 1**

EGO

PRODUCER	MODEL
ACM	TX2 color
ADYX/GENIUS	TE 4433H blue, Bravo TE 4433H, Echo TX4
ALLMATIC	BRO4WN, BRO4W red, BROOVER, BROSTAR, MINI PASS, TECH3
APRIMATIC	TM4, TR2, TR4, TX2, TX4M
BENINÇĂ	APPLE4WV, CUPIDO2, CUPIDO 4, IO, T2, T4WV, TO-GO 2, TO-GO 4WV
CASALI / GENIUS	252, 252 new, 254, 254 new
DEA	GENIE-R W, MIO TR2, MIO TR4
FAAC 433	XT4 433 RC
FADINI	Juby433, Juby small
GIBIDI	AU1600, AU1610, AU1680, AU1810, DOMINO
MHOUSE	GTX4, MT4, TX3, TX4
MOVVOO	MT4, MT4G, MT4V
NICE	SMILO
NORMSTHAL / CRAW-FORD	433-2k, 433-4k, EA433-2k, EA433-4k, EA433-2KM, T4334
PUJOL	Vario-black, Vario3-ocean, Vario-P2153
SEAV	BE GOOD RH1, BE HAPPY RH1, RH2, RH3, RS1, RS2, RS3
V2	PHOENIX, PHOX, TRC4, Handy


**Compatibility table
ROLLING CODE GROUP 1**

EGO32

PRODUCER	MODEL
LIFTMASTER 433	94335E, 84335EML, 94335E-old
SILVELOX	ECO-TSM2, 3400155
LIFTMASTER 15/390	OG 28, OG 48
DOORHAN	T4
ERONE 433/868	SERIE 07, FLAT, MINI, STANDARD


1) Enter set up

Press and hold key 4 (PROG) then press key sequence 1,2 (pic. A). Green led will start to blink rapidly (pic. B).

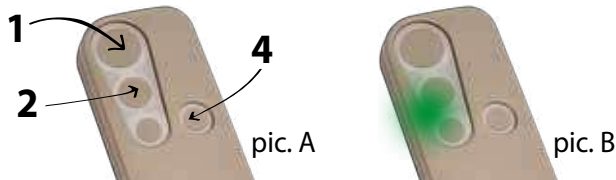

2) Select channel


Press the key (channel) on which you want to store the original transmitter (key 1 for channel 1, pic. C).

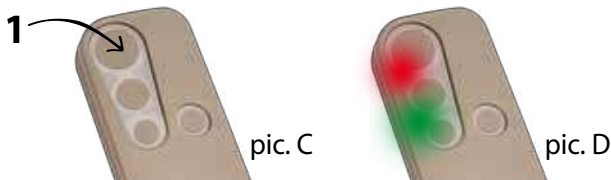

3) Program EGO

Press and hold key 1 and 2 for about 2/3 seconds and release: led on original transmitter will blink. Transmit seed code keeping the original transmitter about 5cm far from EGO (pic. E) pressing the key (channel) you intend to store into EGO. When the code is detected EGO red led goes off and green led will start to blink, at this point you can release the key. (pic. F).

If you want to add another code on a different channel please goes back to step 2 within 3 seconds (until the green led blinks rapidly).

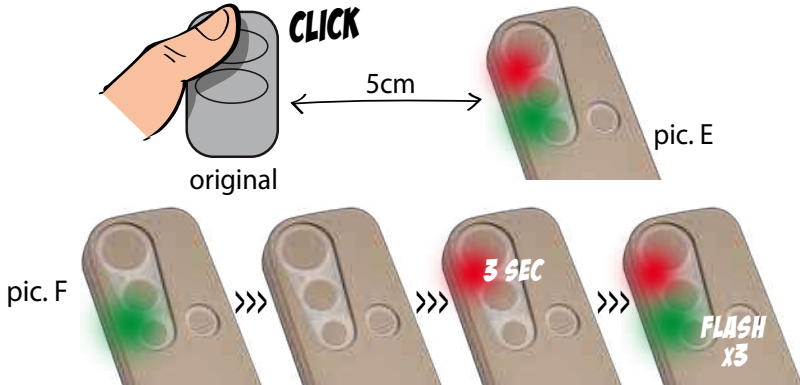


At this point EGO is an emulator of the original transmitter and must be added into the receiver.

4) Add EGO to the receiver


Get closer to the receiver and:

a) Press and hold key 2, then press and hold key 4 (pic. G) until the red led lights steady, then release both (pic. H).

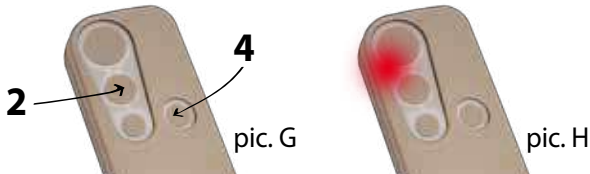

b) Press the key (channel) you want to add into the receiver (key 1 for channel 1, pic. I).

Green led will start to blink indicating the initiation of the communication with the receiver, which can last 25-30 seconds (Pic. J).

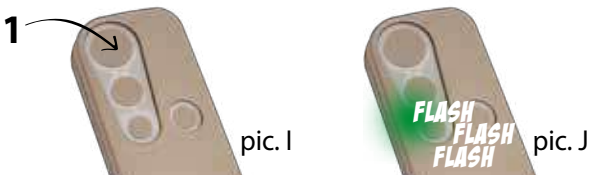

c) Wait for the receiver feedback (opening gate, lights, ...) indicating that EGO has been recognised.

Important: the receiver may has been set up not to accept new transmitters. In this case for the correct procedure please refer to receiver manufacturer instructions.

If the procedure fails because the original transmitter is not compatible, after 10 seconds both led will start to blink alternately.

PROCEDURE TO STORE A ROLLING CODE TRANSMITTER GROUP 2 (FAAC and GENIUS)


Compatibility table ROLLING CODE GROUP 2

EGO

PRODUCER	MODEL
FAAC	DL2 868 SLH, DL4 868 SLH, T2, T4, TML2 SLH, TML4, SLH, XT2 SLH, XT4 SLH
GENIUS	AMIGO JA 332, AMIGO JA 334, KILO TX2, KILO TX4


1) Enter set up

Press and hold key 4 (PROG) then press key sequence 1,2 (pic. A). Green led will start to blink rapidly (pic. B).

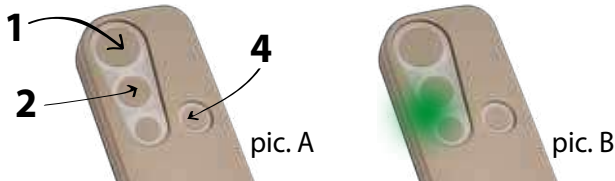


2) Select channel

Press the key (channel) on which you want to store the original transmitter (key 1 for channel 1, pic. C), both led will be lit steady (pic. D).

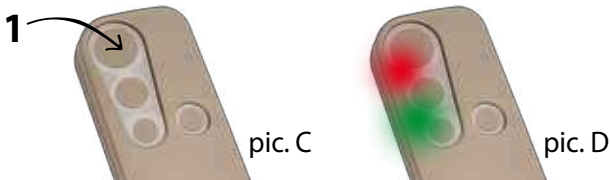

3) Program EGO

Press and hold key 1 and 2 for about 2/3 seconds and release: led on original transmitter will blink. Transmit seed code keeping the original transmitter about 5cm far from EGO (pic. E) pressing the key (channel) you intend to store into EGO. When the code is detected EGO red led goes off and green led will start to blink, at this point you can release the key. (pic. F).

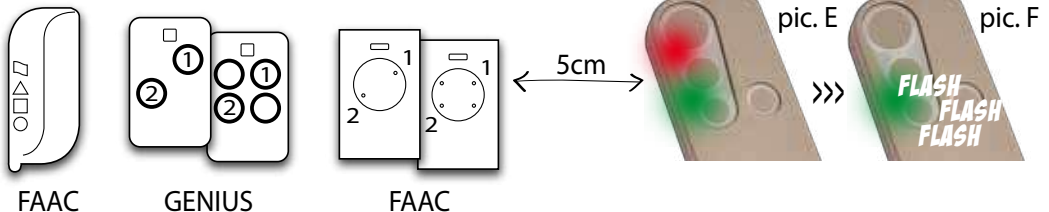

IMMEDIATELY after press and hold again the original transmitter's key until EGO green led goes off, finally to confirm the success of the procedure the red led will blink for about 3 seconds. If you want to add another code on a different channel please goes back to step 2 within 3 seconds (until the green led blinks rapidly).



If the procedure fails because the original transmitter is not compatible, after 10 seconds both led will start to blink alternately.

Important: AAC/GENIUS transmitters comes in two variants: MASTER and SLAVE. Only the former can transmit the seed code and so be successfully duplicated. You can recognise a MASTER transmitter when pressing a key: it will blink once before remaining steady.

EGO as MASTER transmitter

At this point EGO is an emulator of the original transmitter and can be used as MASTER to program other EGO and original FAAC/GENIUS transmitters.

Seed code

This feature can be used when it is necessary to emulate an EGO / FAAC on a new EGO transmitter. Press and hold key 3, then press and hold key 4. The red led will light steady. Release both keys and press the key which source code is needed (key 1 for channel 1, pic. below).



PROCEDURE TO STORE A ROLLING CODE TRANSMITTER GROUP 2 (BFT)


Compatibility table ROLLING CODE GROUP 2 (BFT)

EGO

PRODUCER	MODEL
BFT	KLEIO TX2, KLEIO TX4, MITTO 2, MITTO 4, RB, RCB2, RCB4, TRC2, TRC4, TX2, TX4


1) Enter set up

Press and hold key 4 (PROG) then press key sequence 1,2 (pic. A). Green led will start to blink rapidly (pic. B).

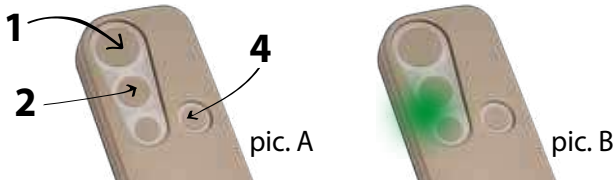


2) Select channel

Press the key (channel) on which you want to store the original transmitter (key 1 for channel 1, pic. C), both led will be lit steady (pic. D).

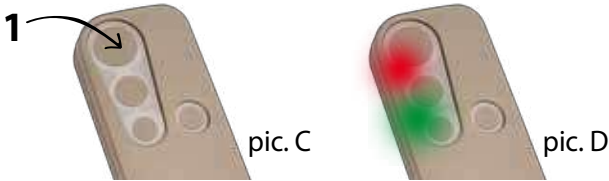

3) Program EGO

Press and hold key 1 and 2 (new models) or hidden button (old models) for about 2/3 seconds and release: led on original transmitter will blink. Transmit seed code keeping the original transmitter about 5cm far from EGO (pic. E) pressing the key (channel) you intend to store into EGO. When the code is detected EGO red led goes off and green led will start to blink, at this point you can release the key. (pic. F).

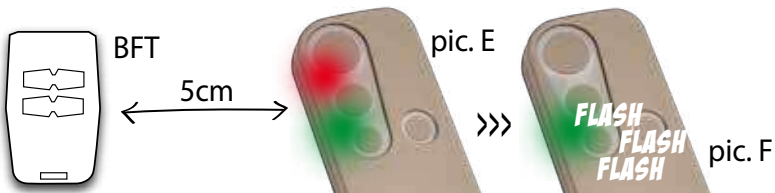


IMMEDIATELY after press and hold the original transmitter's key (channel) until EGO green led goes off, finally to confirm the success of the procedure the red led will blink for about 3 seconds. If you want to add another code on a different channel please goes back to step 2 within 3 seconds (until the green led blinks rapidly).




4) Add EGO to the receiver

At this point EGO is an emulator of the original transmitter and must be added into the receiver. Get closer to the receiver and:

- a) Press and hold key 2, then press and hold key 4 (pic. G) until the red led lights steady, then release both (pic. H).

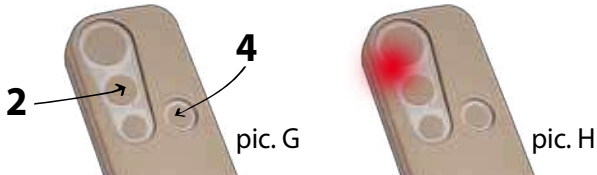

- b) Press the key (channel) you want to add into the receiver (key 1 for channel 1, pic. I). Green led will start to blink indicating the initiation of the communication with the receiver, which can last 25-30 seconds (pic. J).

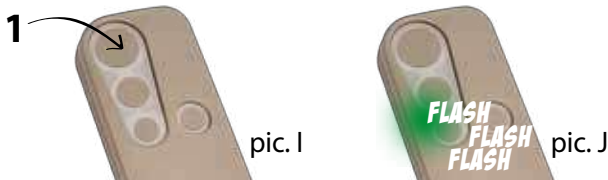

- c) Wait for the receiver feedback (opening gate, lights, ...) indicating that EGO has been recognised.

Important: the receiver may has been set up not to accept new transmitters. In this case for the correct procedure please refer to receiver manufacturer instructions.

If the procedure fails because the original transmitter is not compatible, after 10 seconds both led will start to blink alternately.

Seed code

This feature can be used when it is necessary to emulate an EGO / BFT on a new EGO transmitter. Press and hold key 3, then press and hold key 4. The red led will light steady. Release both keys and press the key which source code is needed (key 1 for channel 1, pic. below).



PROCEDURE TO STORE A ROLLING CODE TRANSMITTER GROUP NICE

Compatibility table

ROLLING CODE GROUP NICE

EGO32

PRODUCER	MODEL
NICE	FLO2R, FLO4R, VERY VR, ERA-INTI2, ERA-ONE2, ERA-ONE4

Required: an original and working NICE transmitter.

1) Enter set up

Press and hold key 2 and 3 for at least 3 seconds until the green led starts to blink faster, then release (pic. A).



2) Select channel


Press the key on which you want to store the new code. The led blinks 3 times for confirmation (pic. B).



3) Add EGO to the receiver

This procedure must be done nearby the automation's receiver. Get closer the receiver and:

- a) press and hold the EGO key (channel) for about 5 seconds (pic. C);
- b) press 3 times the equivalent key on the **NICE original transmitter** (pic. D);
- c) press once the EGO key (channel) again.

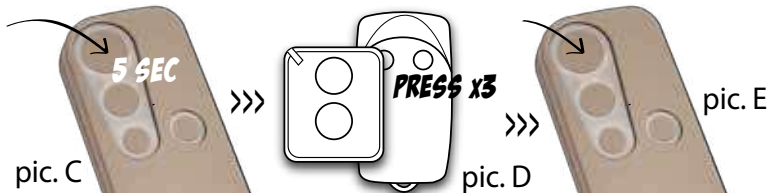

Please wait at least 10 seconds before trying to activate the automation with the newly programmed EGO.

If the procedure fails, wait 20 seconds before trying again from step 1.

PROCEDURE TO STORE A ROLLING CODE TRANSMITTER GROUP PRASTEL

Compatibility table

ROLLING CODE GROUP PRASTEL

EGO32

PRODUCER	MODEL
PRASTEL	TC4E, BFOR, MPSTL1E, MPSTL2E, MPSTL4E, MPSTP2E, MPSTP2

1) Enter set up

Press and hold key 2 and 3 for at least 3 seconds until the green led starts to blink faster, then release (pic. A).



2) Select channel


Press the key in which you want to store the new code 4 times. The led blinks 3 times for confirmation (pic. B).



3) Add EGO to the receiver

This procedure must be done nearby the automation's receiver. Get closer the receiver and:

- a) Press key 1 and 2 on the original transmitter then release; led will light steady for about 2 seconds (pic. C).
- b) When the led goes off the original transmitter send a signal to the receiver to go in programming mode. The receiver remains in this state for 10 seconds during which you have to press the EGO key (channel) you want to add into the receiver (pic. D). Every entry reset the 10 seconds count-down, so it is possible to add another.

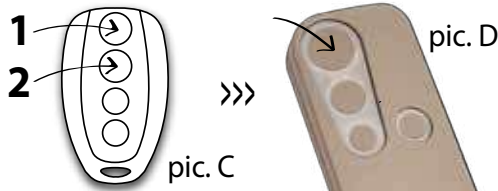

Receiver will exit from programming mode automatically after 10 seconds has passed from the last transmission. If the procedure fails, wait 20 seconds before trying again from step 1.

PROCEDURE TO STORE A ROLLING CODE TRANSMITTER GROUP DITEC

Compatibility table ROLLING CODE GROUP DITEC **EGO32**

PRODUCER	MODEL
DITEC	GOL4, BXLG4, BXLP2, BXL52

1) Enter set up

Press and hold key 2 and 3 for at least 3 seconds until the green led starts to blink faster, then release (pic. A).




2) Select channel

Press the key on which you want to store the new code 6 times. The led blinks 3 times for confirmation (pic. B).



3) Procedure of storage in the receiver

Press and release the PRG button on the radio receiver: a "SIG" LED turns on (see illustration C). Press and hold the transmitter's EGO button on which the code was previously generated (see illustration D). The "SIG" LED slowly flashes and then quickly for 10 seconds, then it turns off. The EGO transmitter is stored on the receiver.

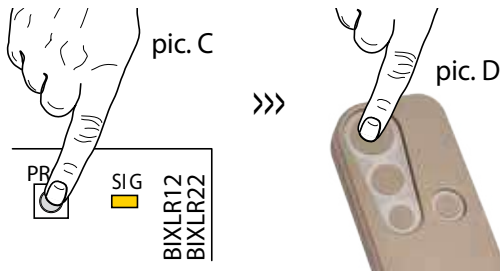

PROCEDURE TO STORE A ROLLING CODE TRANSMITTER GROUP 3

**Compatibility table
ROLLING CODE GROUP 3**

EGO

PRODUCER	MODEL
CARDIN	S449QZ, S437TX
SOMMER / APERTO FM	4013, 4013TX, 4014, 4020, 4022TX, 4025, 4026


**Compatibility table
ROLLING CODE GROUP 3**

EGO32

PRODUCER	MODEL
TELCOMA FM	FM402, FM402E, FM404E


1) Enter set up

Press and hold key 4 (PROG) then press key sequence 1,2 and 3 (pic. A). Green led will start to blink rapidly (pic. B).

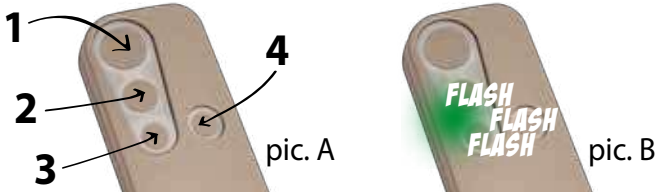

2) Select channel

Press the key (channel) on which you want to store the original transmitter (key 1 for channel 1, pic. C), both led will be lit steady (pic. D).

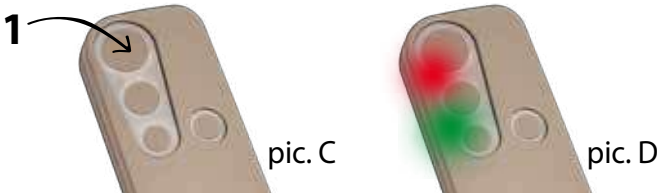


3) Program EGO

Transmit keeping the original transmitter about 5 cm far from EGO (pic. E).

When the frequency is detected, the red led goes off, then when the code is detected the green led goes off too, finally to confirm the success of the procedure the red led will blink for about 3 seconds (pic. F).

If you want to add another code on a different channel please goes back to step 2 within 3 seconds (until the green led blinks rapidly).

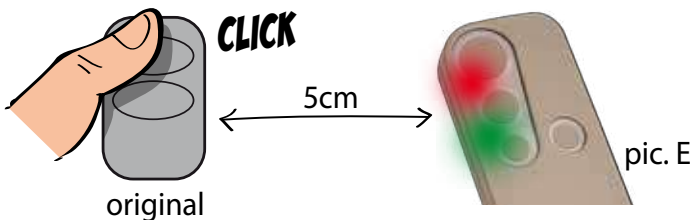




4) Procedure of STORAGE IN THE RECEIVER


The storage of the Sommer and Aperto models on the receiver can only be manually done by following the instructions of the same.

For the storage of the **Cardin** models, get close to the gate and:

a) Press and hold the key 2, then immediately press and hold the key 4 (see illustration G), the red led turns on, release both the keys (see illustration H).

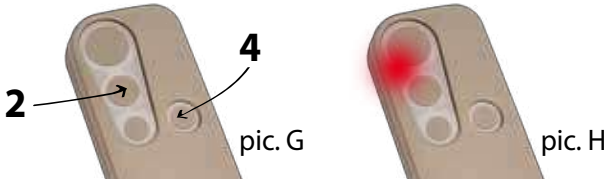

b) Immediately after, press and release the key that has to be stored (for example on the key 1 like in the illustration I), the green led starts flashing (illustration J) which means that the automatic activation procedure of about 25-30 sec is starting.

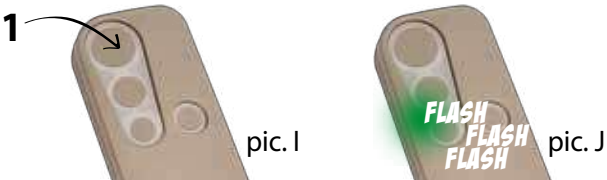

c) Wait for the activation of the receiver (opening of the gate, switching on of the lamps, ...). The remote control is stored.


Important: the receiver may has been set up not to accept new transmitters. In this case for the correct procedure please refer to receiver manufacturer instructions.

If the procedure fails because the original transmitter is not compatible, after 10 seconds both led will start to blink alternately.

PROCEDURE TO STORE A FIXED CODE TRANSMITTER (See the Compatibility Tables pages 5÷12)


1) Enter set up

Press and hold key 4 (PROG) then press key sequence 1,2 (pic. A). Green led will start to blink rapidly (pic. B).

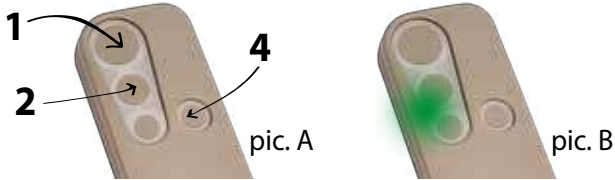

2) Select channel

Press the key (channel) on which you want to store the original transmitter (key 1 for channel 1, pic. C), both led will be lit steady (pic. D).

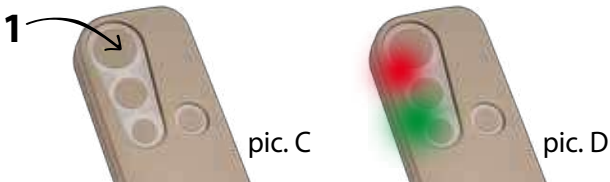


3) Program EGO

Transmit keeping the original transmitter about 5cm far from EGO (pic. E).

When the frequency is detected, the red led goes off, then when the code is detected the green led goes off too, finally to confirm the success of the procedure the red led will blink for about 3 seconds (pic.F).

If you want to add another code on a different channel please goes back to step 2 within 3 seconds (until the.green led blinks rapidly).

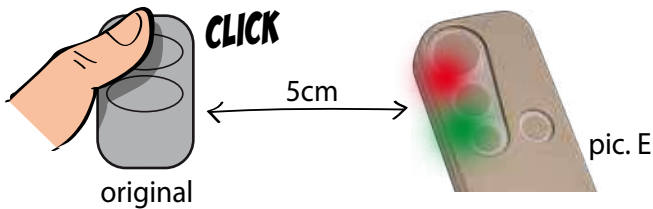

TECHNICAL FEATURES EGO - EGO32

Power supply: 3V battery CR 2032

Antenna range (outdoor) from 60 to 80 mt

Frequency (UE zone) 433,92MHz and 868,30MHz



GENERAL WARNINGS

- 1) **Rolling code** technology is evolving so new transmitters could be difficult, if not impossible, to emulate
- 2) For a **successful emulation** is convenient to use an original manufacturer transmitter making sure it's working and the battery is charged
- 3) Ensure there aren't **sources of interference** (like cellular phones)
- 4) To **replace the battery** remove the screw on the back and open the plastic shell to access the electronic circuit. Dispose of the old battery in the appropriate collection centers.

SAFETY RULES

Keep the transmitter **out of the reach of children and pets**, the product contains small removable parts.

Do not store the transmitter in environments with high humidity, vapors, dusts, or exposed to sunlight, ultraviolet, gamma or X rays.

WARRANTY

The **warranty** complies with the law. The contact person for any warranty is the dealer. The warranty claim will only apply to the country where the product was purchased. The battery is not included in the warranty.

DECLARATION OF CONFORMITY

The product EGO/EGO32 is in conformity with the relevant Union harmonisation legislation:

1999/5/EC on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity

1999/519/EC on the limitation of exposure of the general public to electromagnetic fields. References to the relevant harmonised standards used or references to the other technical specifications in relation to which conformity is declared: EN 300 220-2 Harmonized standard for ERM SRD in the 25 MHz to 1000 MHz range

EN 301 489-1 Electromagnetic Compatibility standard for radio equipment and services

EN 301 489-3 EMC Specific for Short-Range Devices (SRD)

EN 60950-1 Information technology equipment. Safety. General requirements

EN 62479 Assessment of the compliance of low power electronic and electrical equipment with the basic restrictions related to human exposure to electromagnetic fields (10 MHz to 300 GHz).



NOTES



INDICE DEI CONTENUTI

General information	page 2
How to generate a rolling code if original transmitter is lacking	page 3
Double click mode	page 3
Rolling code transmitters compatibility tables	page 4
Fixed code transmitters compatibility tables	page 5
Procedure to store a rolling code transmitter – group 1	page 13
Procedure to store a rolling code transmitter – group 2 (FAAC and GENIUS)	page 15
Procedure to store a rolling code transmitter – group 2 (BFT)	page 17
Procedure to store a rolling code transmitter – group NICE	page 19
Procedure to store a rolling code transmitter – group PRASTEL	page 20
Procedure to store a rolling code transmitter – group DITEC	page 21
Procedure to store a rolling code transmitter – group 3	page 22
Procedure to store a fixed code transmitter	page 24
Technical features EGO - EGO32	
General warnings	
Safety rules	page 25
Warranty	
Declaration of conformity	

All trademarks belong to their legitimate owners; third-party brands, product names, trade names, corporate names and company names belong to their respective owners or registered trademarks of other companies and have been used for purposes of explanation and to the owner's benefit, without implying a violation of copyright law.

All information and content (text, graphics and images) here represented are, to the best of our knowledge, in the public domain; if, unwittingly, was published material subject to copyright or in violation of the law, please inform us and we will immediately check and eventually remove it.

AB Techno srl reserves the right to introduce at any time the appropriate changes to the product and its instructions.

Abexo[®]

AB Tecno Srl

Via Cicogna 95

40068 San Lazzaro di Savena (BO)

Tel: +39 051 6259580 / fax: +39 051 6259600

info@abtecno.com

www.abtecno.com