

# LZR<sup>®</sup>-I100/ -I110

## LASER SCANNERS FOR INDUSTRIAL DOORS

I100: max. detection range of 9.9 m x 9.9 m

I110: max. detection range of 5.0 m x 5.0 m

User's Guide for software version 0600 and higher

## SAFETY




The device emits invisible (IR) and visible laser radiations.  
IR laser: wavelength 905nm; output power <0.10mW  
(Class 1 according to IEC 60825-1)  
Visible laser: wavelength 635nm; output power <1mW  
(Class 2 according to IEC 60825-1)

The visible laser beams are inactive during normal functioning.  
The installer can activate the visible lasers if needed.  
Do not stare into the visible red laser beams.



### CAUTION!

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

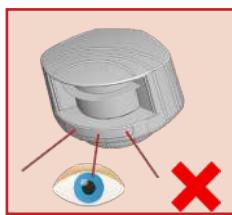

Do not stare into the visible red laser beams.



The warranty is void if unauthorized repairs are made or attempted by unauthorized personnel.




Only trained and qualified personnel may install and adjust the sensor.



Test the good functioning of the installation before leaving the premises.

The manufacturer of the door system is responsible for carrying out a risk assessment and installing the sensor and the door system in compliance with applicable national and international regulations and standards on door safety. Other use of the device is outside the permitted purpose and can not be guaranteed by the manufacturer. The manufacturer cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.

## INSTALLATION AND MAINTENANCE

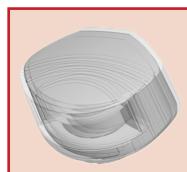

Avoid extreme vibrations.



Do not cover the front screens.




Avoid moving objects and light sources in the detection field.



Avoid the presence of smoke and fog in the detection field.



Avoid condensation.

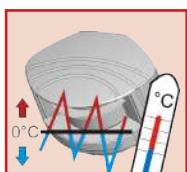

Avoid exposure to sudden and extreme temperature changes.



Avoid direct exposure to high pressure cleaning.



Do not use aggressive products to clean the front screens.




Wipe the front screens regularly with a clean and damp cloth.




Keep the sensor permanently powered in environments where the temperature can descend below -10°C.

## DESCRIPTION

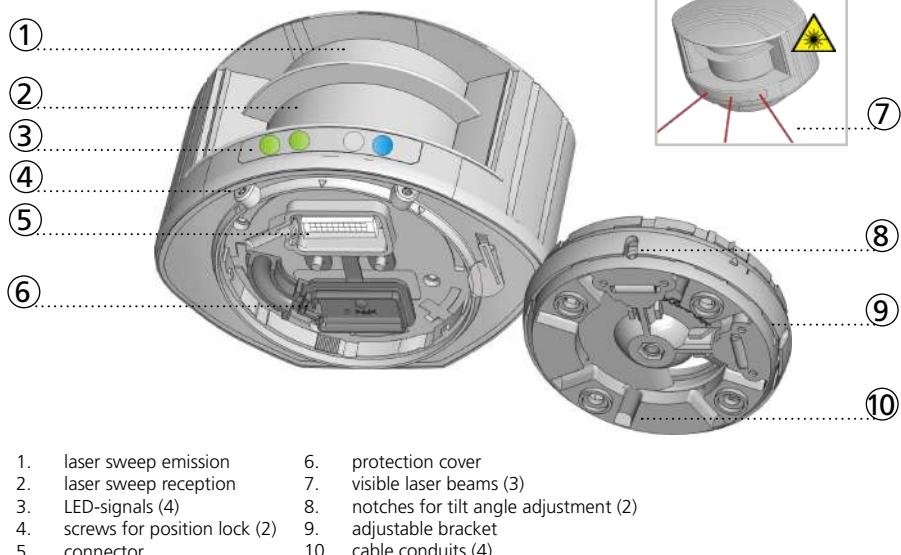

## LED-SIGNAL

 

1. Detection LED: relay 1 - optional field
2. Detection LED: relay 2 - safety field
3. Error LED
4. Power LED

DETECTION LEDs



no detection

ERROR LED




no error

POWER LED




no power

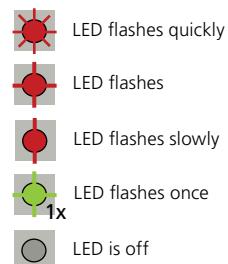

All 4 LEDs can be switched off and on again by remote control. This can be useful in cases where the sensor should not draw any attention.



## SYMBOLS

 

## HOW TO USE THE REMOTE CONTROL



30 minutes after last use, the sensor locks the access to the remote control session.  
Cut and restore power supply. The remote control session is accessible again during 30 minutes.



After unlocking, the red LED flashes and the sensor can be adjusted by remote control.

 


If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.




To end an adjustment session, always lock the sensor.

### ADJUSTING ONE OR MORE PARAMETERS



### CHECKING A VALUE

 


X = number of flashes = value of the parameter

= field width: 4.2 m


= field width is defined by teach-in

### RESTORING TO FACTORY VALUES

 


### SAVING AN ACCESS CODE

 The access code is recommended for sensors installed close to each other.




### DELETING AN ACCESS CODE

 

Enter the existing code

## 1 MOUNTING

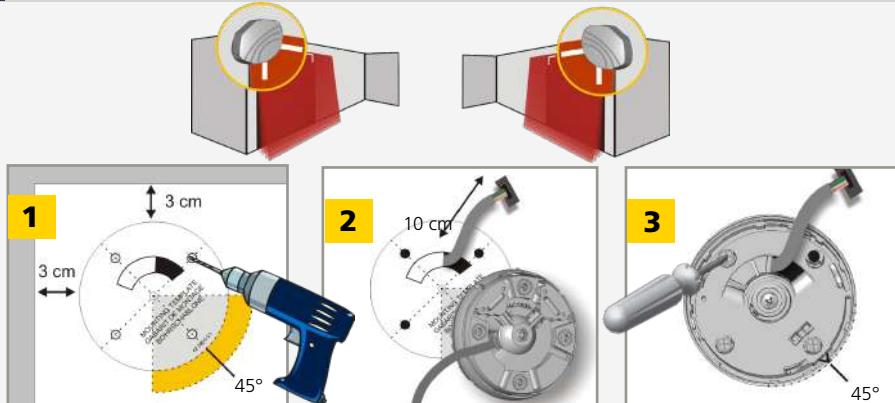


Use the mounting template to position the sensor correctly. The grey area indicates the detection range. Drill 4 holes and make a hole for the cable if possible.

Pass the cable +/- 10 cm though the cable opening. If drilling an opening is not possible, use the cable conduits on the back side of the bracket.

Position the bracket and fasten the 4 screws firmly in order to avoid vibrations.



Open the protection cover, plug the connector and position the cable in the slit.  
Close the protection cover and fasten it firmly.

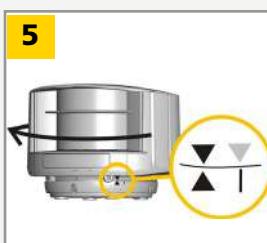

Position the housing on the bracket and turn the sensor until the two triangles are face to face.




Use the LBA accessory if needed.



It is not recommended to install two units face to face, as exposure of the emission beam to the receiving lens may cause accelerated aging of the product.

## 2 WIRING

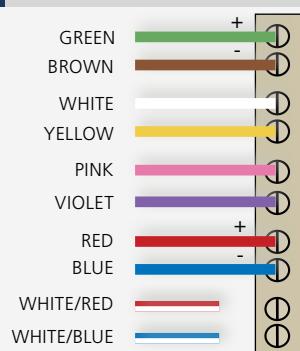

POWER SUPPLY

Use the Power Supply Module (24V DC, 0.75 A) if needed.



RELAY 1 - OPTIONAL FIELD

The sensor tests both relays.

RELAY 2 - SAFETY FIELD

Door control without test: connect red and blue wires to power supply (with polarity)

CAT2  
Pl d

TEST

NOT USED

### 3 POSITIONING




Unlock the sensor and activate the visible laser beams in order to position the curtains parallel to the door.


The visible laser beams stay activated for 15 minutes or can be turned off by the same sequence.




Adjust the **lateral position** of the detection field.

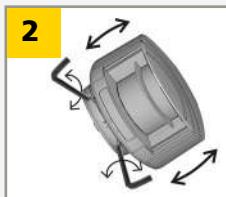


Adjust the **tilt angle** of the detection field with the hex key.

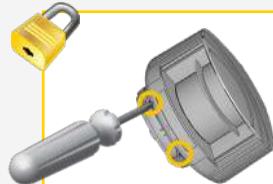


**Lock the position** of the mounting bracket to avoid malfunctioning in case of extreme vibrations.

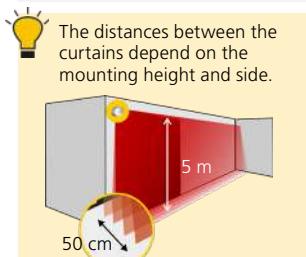

The distances between the curtains depend on the mounting height and side.

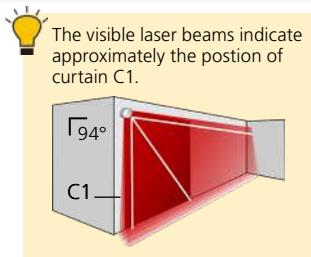


The visible laser beams indicate approximately the position of curtain C1.

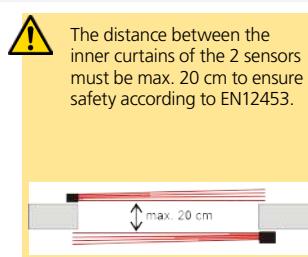


The distance between the inner curtains of the 2 sensors must be max. 20 cm to ensure safety according to EN12453.

### 4 MOUNTING SIDE

 
Check and select the corresponding mounting side if necessary.



Stay outside of the detection field to avoid disturbances.

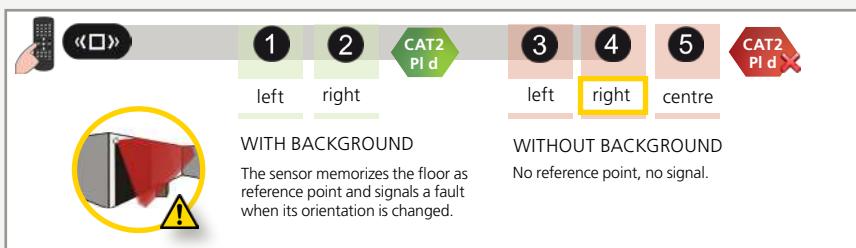

 A teach-in is launched, the sensor learns its environment and automatically determines the detection field(s). Both RED LEDs flash slowly and the 3 visible laser beams automatically light up during 30 seconds.



After setting the mounting side, the safety and the optional field have the same dimensions.



## 5 SAFETY FIELD CONFIGURATION (RELAY 2)
 
### SAFETY FIELD TEACH-IN

Launch a teach-in after changing the sensor position or when new objects are added to or changed in the detection zone.



During teach-in, the detection field should be free of snow buildups, heavy rain, snowfall, fog or other moving objects.

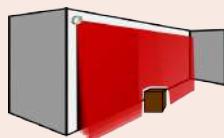


During teach-in, the sensor learns its surroundings and adapts the detection field shape to these. Objects in the detection field will be cut out.

### FIELD DIMENSIONS

After the teach-in, the field dimensions can be reduced by remote control.

|        |   | LZR®-I100 |           | LZR®-I110 |           |
|--------|---|-----------|-----------|-----------|-----------|
|        |   | MIN       | MAX       | MIN       | MAX       |
| WIDTH  | ↔ | 0 0       | 0 5 - 9 9 | 0 0       | 0 5 - 5 0 |
|        |   | no field  | 0,5 m     | 9,9 m     | 5,0 m     |
| HEIGHT | ↔ | 0 1       | 9 9       | 0 1       | 5 0       |
|        |   | 0,1 m     | 9,9 m     | 5,0 m     | 5,0 m     |

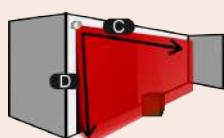

Ex:



for a field width of 6.2 m



The field is by default limited to 5 x 5 m. You can adapt the dimensions by remote control, but they can never be bigger than the shape which was defined by the teach-in.



FACTORY VALUES





## 6 OPTIONAL FIELD CONFIGURATION (RELAY 1)



Make sure the white and yellow wires are connected to the corresponding inputs before configuring the optional field.

### VIRTUAL PUSH BUTTON TEACH-IN (VPB)

Install 1 or 2 virtual push buttons as activation zone(s) to open the door «manually».

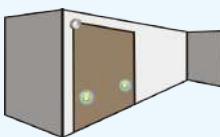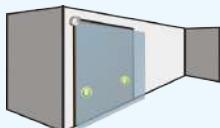

1

Apply the virtual push button sticker(s) **within** the optional field.


2

Launch a VPB teach-in to configure the detection zone(s). When the red LED flashes very slowly after 3 seconds, hold your hand in front of the sticker to learn the detection zone. The green LED flashes 3x to confirm the selection. When the red LED flashes again, learn a second (max. 2) detection zone or wait until the LED switches to green.

Launch a new VPB teach-in each time the sensor position is changed or new objects are added to or changed in the detection zone.

**ATTENTION!** This VPB teach-in is different from the safety field teach-in.

max 2x

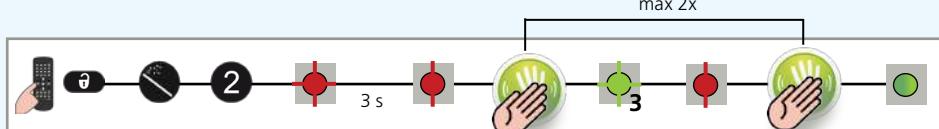

### FIELD DIMENSIONS

Reduce the field dimensions if needed.



In order to configure the field dimensions, you have to cancel the virtual push button function by launching a new VPB teach-in without any movement in the detection field.



LZR®-I100

LZR®-I110



0 0 0 5 - 9 9

0 0 0 5 - 5 0

same as safety field


0,5 m

9,9 m

same as safety field

0,5 m

5,0 m

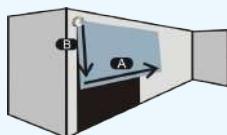

0 0 0 5 - 9 9

no field

0,5 m

9,9 m

0 0 0 5 - 5 0

no field

0,5 m

5,0 m




Change output configuration to value 3.



Test the good functioning of the installation before leaving the premises.


## OTHER REMOTE CONTROL CONFIGURATIONS

### ACTIVE DETECTION CURTAINS

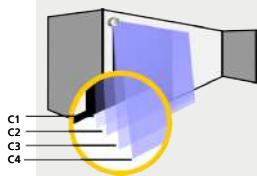


The distances between the curtains depend on the mounting height and side. When mounted on the left, the distance between curtain C1 and curtain C4 is approximately 10 cm for every meter (mounting height). **Example:** at 5 m the distance between C1 and C4 is 50 cm.


### IMMUNITY FILTER

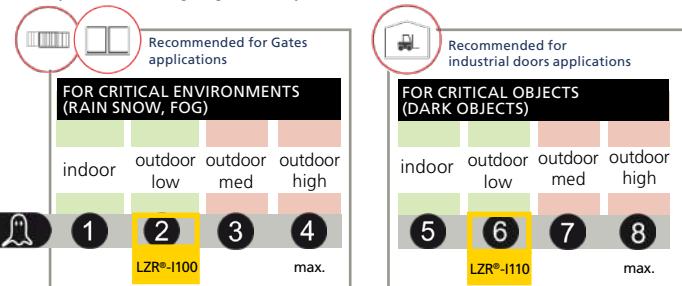

### UNCOVERED ZONE

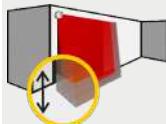

### MIN. OBJECT SIZE (approximate values)

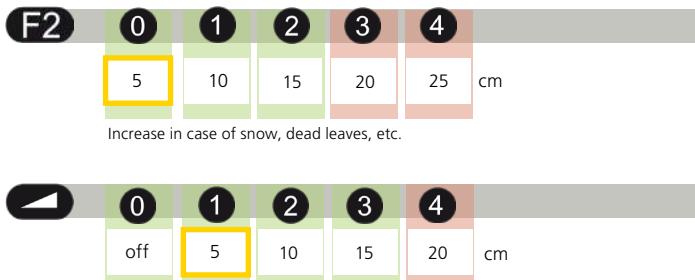

### OUTPUT ACTIVATION DELAY (approximate values)

 


The relays are triggered when the detection duration  $\geq$  the selected time.

### DETECTION FIELD REDIRECTION



### OUTPUT CONFIGURATION



R = RELAY OUTPUT



## TROUBLESHOOTING

|  |  |  |  |
|--|--|--|--|
|    | No blue LED  | There is no power.<br>The polarity of the power supply is inverted.<br>All LEDs have been deactivated by remote control.   | <p><b>1</b> Check cable and connexion.<br/><b>1</b> Check the polarity of the power supply.<br/><b>1</b> Activate the LEDs by remote control.</p>  |
|    | Only the blue LED is on.                                   | The test input is not connected.   | <p><b>1</b> Check wiring.<br/>The RED and BLUE cable have to be connected to the test input or the power supply.</p>   |
|    | The detection LED remains green.                           | The detection field is too small or deactivated.<br>The object size is too small.  | <p><b>1</b> Check the size of the fields.<br/><b>2</b> Launch a teach-in.<br/><b>1</b> Decrease the min. object size.</p>  |
|    | The detection LED remains red.                             | Someone or something is in the detection field.<br>The field is touching the floor, the wall or the door, which leads to detection.  | <p><b>1</b> Step out of the field and/or remove the any object(s) from the field.<br/><b>1</b> Activate the 3 red beams and check if the position of the sensor is correct.<br/>If not, adjust the hex screws.<br/><b>2</b> Verify the field size.<br/><b>3</b> Launch a teach-in.</p>                         |
|    | The orange LED is flashing and the detection LEDs are red. | No background (reference point) is found.<br><br>The sensor is masked.   | <p><b>1</b> Check the position of the sensor.<br/><b>2</b> Check the mounting side setting.<br/>If there is no background, set the mounting side to value 3 to 5.<br/><b>3</b> Launch a new teach-in.</p> <p><b>1</b> Verify and clean the front screens with a damp cloth.</p>                                |
|    | The orange LED is on.                                      | The power supply voltage is exceeding the acceptable limits.<br><br>The sensor exceeds its temperature limits.   | <p><b>1</b> Check the power supply voltage.</p> <p><b>1</b> Verify the outside temperature where the sensor is installed. Eventually protect the sensor from sunlight using a cover.</p>   |
|  | The sensor does not respond to the remote control.         | Internal error<br><br>30 minutes after last use of the remote control, the sensor locks the access to the remote control session.<br><br>The batteries in the remote control are not installed properly or dead. | <p><b>1</b> Wait a few seconds.<br/>If the LED remains ON, reset the power supply.<br/>If the LED turns on again, replace the sensor.</p> <p><b>1</b> Cut and restore power supply.<br/>The remote control session is accessible again during 30 minutes.</p> <p><b>1</b> Verify or replace the batteries.</p> |
|  |  | The remote control is badly pointed.<br><br>A reflective object is in close proximity to the sensor.   | <p><b>1</b> Point the remote control towards the sensor, but with a slight angle. The RC should not be pointed in a right angle in front of the sensor.</p> <p><b>1</b> Avoid highly reflective material in proximity to the sensor.</p>   |
|  | The sensor does not unlock.                                | You have to enter an access code or the wrong code was entered.  | <p><b>1</b> Cut and restore power supply.<br/>No code is required to unlock during the first minute after powering.</p>  |

## TECHNICAL SPECIFICATIONS

|   |  |
|---|--|
| Technology:   | laser scanner, time-of-flight measurement  |
| Detection mode:   | motion and presence (EN 12453 level E)   |
| Max. detection range:   | LZR®-I100: 9.9 m x 9.9 m; LZR®-I110: 5.0 m x 5.0 m   |
| Uncovered zone:   | 5 - 25 cm (adjustable)   |
| Remission factor:   | > 2 %  |
| Angular resolution:   | 0,3516 °   |
| Min. detected object size (typ.):<br>(in proportion to object distance) | LZR®-I100: 2,1 cm @ 3 m ; 3,5 cm @ 5 m ; 7 cm @ 10 m<br>LZR®-I110: 2,1 cm @ 3 m ; 3,5 cm @ 5 m   |
| Testbody:   | 700 mm x 300 mm x 200 mm (testbody A according to EN 12453)  |
| Emission characteristics:   | (IEC/EN 60825-1)   |
| IR laser:   | wavelength 905 nm; output power <0.10 mW (CLASS 1)   |
| Red visible laser:  | wavelength 635 nm; output power <1 mW (CLASS 2)  |
| Supply voltage:   | 10-35 V DC @ sensor side (to be operated from SELV compatible power supplies only)   |
| Power consumption:  | < 5 W  |
| Peak current at power-on:   | 1.8 A (max. 80 ms @ 35 V)  |
| Cable length:   | 10 m   |
| Response time:  | typ. 20 ms; max. 80 ms (+ output activation delay)   |
| Output:   | 2 electronic relays (galvanic isolated - polarity free)  |
| Max. switching voltage:   | 35 V DC / 24 V AC  |
| Max. switching current:   | 80 mA (resistive)  |
| Switching time:   | $t_{ON}=5$ ms; $t_{OFF}=5$ ms  |
| Output resistance:  | typ 30 Ω   |
| Voltage drop on output:   | < 0.7 V @ 20 mA  |
| Leakage current:  | < 10 µA  |
| Input:  | 1 optocouplers (galvanic isolated - polarity free)   |
| Max. contact voltage:   | 35 V DC (over-voltage protected)   |
| Voltage threshold:  | Log. H: >8 V DC; Log. L: <3 V DC   |
| Response time monitoring input:   | < 5 ms   |
| LED-signal:   | 1 blue LED: power-on status<br>1 orange LED: error status<br>2 bi-coloured LEDs: detection/output status (green: no detection; red: detection) |
| Dimensions:   | 125 mm (D) x 93 mm (W) x 70 mm (H) (mounting bracket + 14 mm)  |
| Material:   | PC/ASA   |
| Colour:   | black or white   |
| Mounting angles on bracket:   | -45 °, 0 °, 45 °   |
| Rotation angles on bracket:   | -5 ° to +5 ° (lockable)  |
| Tilt angles on bracket:   | -3 ° to +3 °   |
| Protection degree:  | IP65   |
| Temperature range:  | -30 °C to +60 °C if powered; -10 °C to +60 °C unpowered  |
| Humidity:   | 0-95 % non-condensing  |
| Vibrations:   | < 2 G  |
| Pollution on front screens:   | max. 30 %; homogenous  |
| Conformity:   | EN 12453 (level E)<br>EN ISO 13849-1 (Pl "d" CAT 2); EN 62061 (SIL 2); EN 12978  |

BEA SA | LIEGE SCIENCE PARK | ALLÉE DES NOISETIERS 5 - 4031 ANGLEUR [BELGIUM] | T +32 4 361 65 65 | F +32 4 361 28 58 | INFO@BEA.BE | WWW.BEA-SENSORS.COM

BEA hereby declares that this product is in conformity with the European directives 2014/30/EU, 2006/42/EC, 2011/65/EU.

EC-type examination certificate from TÜV NORD CERT : 44 205 13089629

The complete declaration of conformity is available on our website.

This product should be disposed of separately from unsorted municipal waste

