


LZR

EN

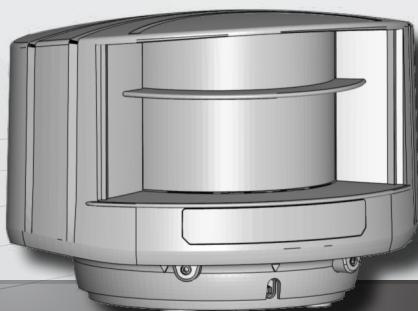

LZR[®] - S600


LASER SCANNER
FOR BUILDING AUTOMATION AND SECURITY

User's Guide for software version 0600 and higher
(refer to tracking label on product)


BUILDING AUTOMATION AND SECURITY

Other use of the device is outside the permitted purpose and can not be guaranteed by the manufacturer.
The manufacturer cannot be held responsible for incorrect installations or inappropriate adjustments of the sensor.

DESCRIPTION

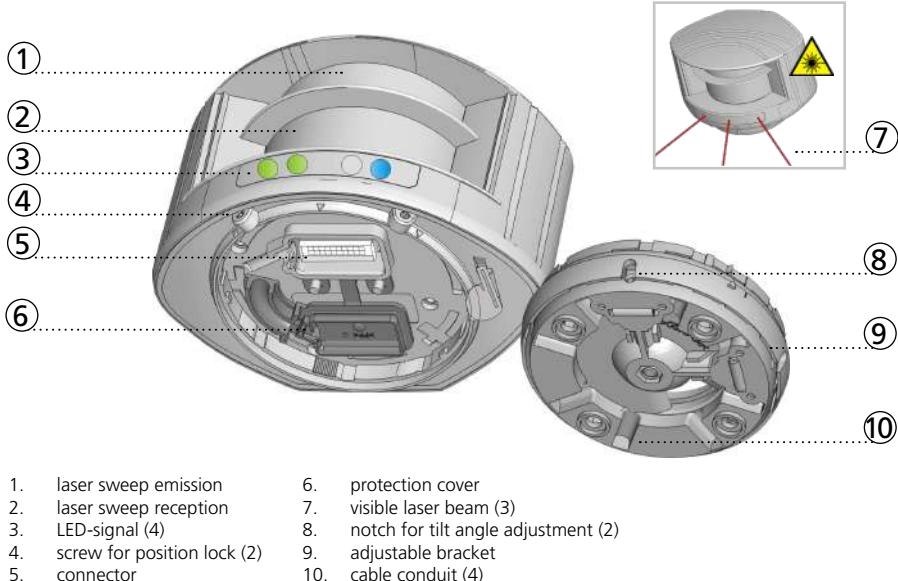

LED-SIGNAL



1. Detection LED: relay 1 - field 1
2. Detection LED: relay 2 - field 2
3. Error LED
4. Power LED

DETECTION LEDs

detection

no detection

ERROR LED


error

no error

POWER LED

power

no power

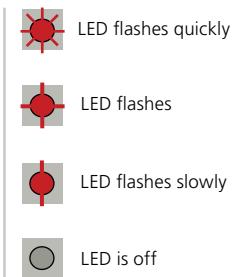


TIP! All LEDs can be switched off and on again by remote control:



SYMBOLS



Caution!
Laser radiation



Remote control
sequence



Possible
remote control
adjustments



Factory values



Alarm

SAFETY




The device emits invisible IR and visible laser radiations.
IR laser: wavelength 905nm; output power <0.10mW
(Class 1 according to IEC 60825-1)
Visible laser: wavelength 635nm; output power <1mW
(Class 2 according to IEC 60825-1)

The visible laser beams are inactive during normal functioning.
The installer can activate the visible lasers if needed.
Do not stare into the visible red laser beams.



CAUTION!

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

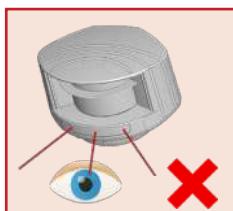

Do not stare into the visible red laser beams.



The warranty is void if unauthorized repairs are made or attempted by unauthorized personnel.



Only trained and qualified personnel may install and adjust the sensor.




Test the good functioning of the installation before leaving the premises.

INSTALLATION AND MAINTENANCE



Avoid extreme vibrations.

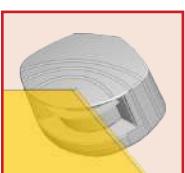


Do not cover the front screens.




Avoid moving objects and light sources in the detection field.



Avoid the presence of smoke and fog in the detection field.

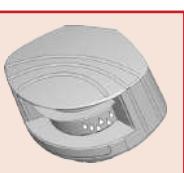

Avoid condensation.

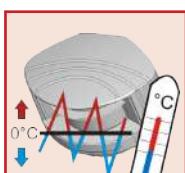

Avoid exposure to sudden and extreme temperature changes.



Avoid direct exposure to high pressure cleaning.



Do not use aggressive products to clean the front screens.




Wipe the front screens regularly with a clean and damp cloth.




Keep the sensor permanently powered in environments where the temperature can descend below 0°C.

POSSIBLE APPLICATIONS

PROTECTION OF WORKS OF ART: WARNING & ALARM

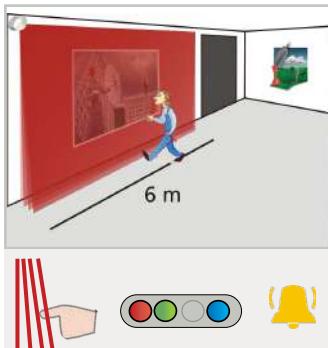

Field 1 (4 active curtains) triggers relay 1:
warning

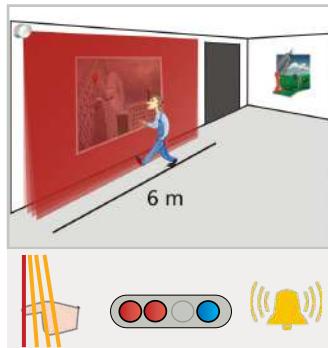

Field 2 (only curtain C1 active) triggers relay 2:
alarm


Adapt the field widths (6 m for example):




Reduce field 2 to 1 curtain (C1):



DAY AND NIGHT FEATURE

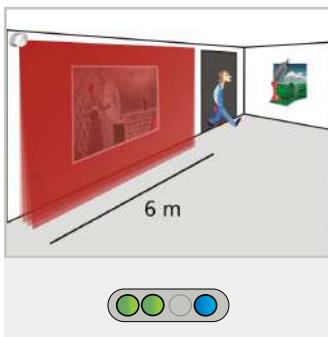


During day time, only field 1 is active and triggers relay 1.

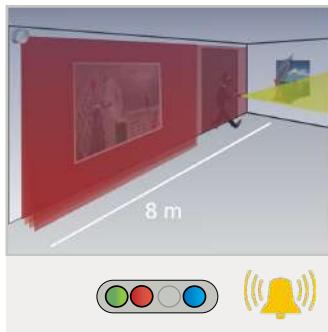

During night time field 2 is active too and triggers relay 2: intrusion alarm


Adapt the field width of field 1 (6 m for example):



Adapt the field width of field 2 (8 m for example):



1 MOUNTING

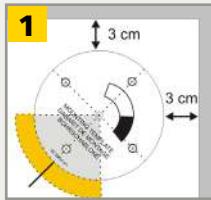

Use the adhesive mounting template to position the sensor correctly. The grey area indicates the detection range.



Drill 4 holes as indicated on the mounting template. Make a hole for the cable if possible.



Pass the cable +/- 10 cm through the cable opening.




Position the bracket and fasten the 4 screws firmly.




Open the protection cover, plug the connector and position the cable in the slit.



Close the protection cover and fasten it firmly.

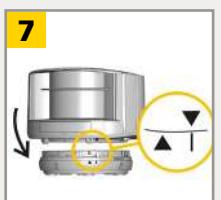

Position the housing on the bracket.

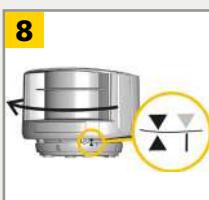

Turn the sensor until the two triangles are face to face.



It is not recommended to install two units face to face, as exposure of the emission beam to the receiving lens may cause accelerated aging of the product.


2 WIRING

GREEN	POWER SUPPLY +
BROWN	POWER SUPPLY -
WHITE	
YELLOW	RELAY 1 - FIELD 1
PINK	
VIOLET	RELAY 2 - FIELD 2
RED	
BLUE	TEST + No monitoring*: connect red and blue wires to power supply (no polarity)
WHITE/RED	TEST - connect red and blue wires to ground
WHITE/BLUE	TEACH-IN No teach-in via input*: connect white/red and white/blue wires to ground

3 POSITIONING




Unlock the sensor and activate the visible laser beams.

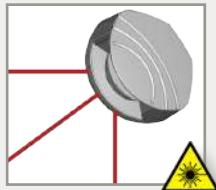


The visible laser beams indicate approximately the position of curtain C1 and limit the angle of the detection field.


The visible laser beams stay activated for 15 minutes or can be turned off the same way they were activated.

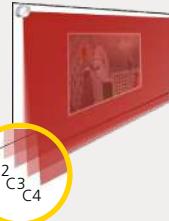

Adjust the **lateral position** of the detection field.

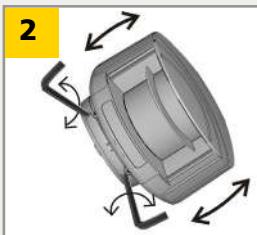

Adjust the **tilt angle** of the detection field with the hex key.

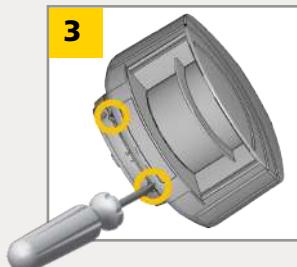

Lock the position of the mounting bracket to avoid malfunctioning in case of extreme vibrations.

4 MOUNTING SIDE

Select the corresponding mounting side.

The sensor then learns its environment and automatically determines the detection field(s). Both red LEDs flash slowly and the 3 visible laser beams automatically light up during 30 seconds.

Stay outside of the detection field to avoid disturbances.



1

2


3

4

5

left right


WITH BACKGROUND

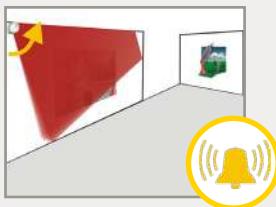

The sensor memorizes the floor as reference point and will signal a fault in case the orientation of the sensor is changed (on purpose or by accident).

left right centre

WITHOUT BACKGROUND

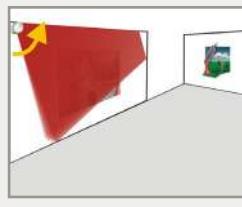

No reference point is memorized, no alarm in case of interference with sensor position.

5 FIELD DIMENSIONS

FIELD 1


WIDTH  AE 001 - 250 000
0.1 m - 25.0 m
10.0 m field 2 = field 1

HEIGHT  BE 001 - 250 000
0.1 m - 25.0 m
10.0 m no field

FIELD 2

WIDTH  CE 001 - 250 000
0.1 m - 25.0 m
10.0 m no field

HEIGHT  DE 001 - 250 000
0.1 m - 25.0 m
10.0 m

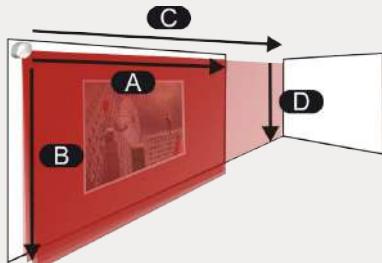

EXAMPLES

 AE-0-6-2 for a field width of 6.2 m
 BE-0-4-5 for a field height of 4.5 m

IMPORTANT: Test the good functioning of the installation before leaving the premises.

TEACH-IN

The teach-in can be launched either via remote control or via connecting the white/red and white/blue wires.

Launch a teach-in:

- after changing the sensor position
- when new objects are added to or changed in the detection zone.


During teach-in, the sensor learns its surroundings and adapts the detection field shape to these. Objects in the detection field will be cut out.



Stay outside of the detection field to avoid disturbances.



To launch a teach-in via input, please contact SENSORIO for more information.

To launch a teach-in via remote control, use the following sequence:



REMOTE CONTROL ADJUSTMENTS (OPTIONAL)

DETECTION CURTAINS

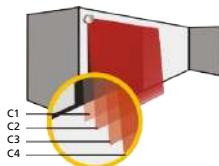

0	deactivate curtain on both fields
1	activate curtain only on field 1
2	activate curtain only on field 2
9	activate curtain on both fields



C1 + C2 active on field 1 only
C3 + C4 active on field 2 only



C1 active on both fields
C2+C3 active on field 2 only
C4 deactivated



All curtains active on both fields

The distances between the curtains depend on the mounting height and side. When mounted on the left, the distance between the first and the last curtain is approximately 10 cm for every meter (mounting height). **Example:** at 5 m the distance is 50 cm.

UNCOVERED ZONE



IMMUNITY FILTER



MIN. OBJECT SIZE

approximate values



OUTPUT ACTIVATION DELAY

approximate values




The outputs are triggered after a constant detection time of x ms (ex. value 3 = 300 ms).

DETECTION FIELD REDIRECTION



OUTPUT CONFIGURATION



A = active
P = passive

NO = normally open
NC = normally closed



HOW TO USE THE REMOTE CONTROL



After unlocking, the red LED flashes and the sensor can be adjusted by remote control.



If the red LED flashes quickly after unlocking, you need to enter an access code from 1 to 4 digits.




To end an adjustment session, always lock the sensor.

ADJUSTING ONE OR MORE PARAMETERS




CHECKING A VALUE



   = field width: 4.2 m


 = field width is defined by teach-in

RESTORING TO FACTORY VALUES




SAVING AN ACCESS CODE

The access code is recommended for sensors installed close to each other.



DELETING AN ACCESS CODE



Enter the existing code

30 minutes after last use, the sensor locks the access to the remote control session. Cut and restore power supply. The remote control session is accessible again during 30 minutes.



X = THE NUMBER OF FLASHERS INDICATES THE VALUE OF THE PARAMETER.

TROUBLESHOOTING

	No blue LED	There is no power. The polarity of the power supply is inverted. All LEDs have been deactivated by remote control.	1 Check cable and connexion. 1 Check the polarity of the power supply. 1 Activate the LEDs by remote control.
	Only the blue LED is on.	The test input is not connected.	1 Check wiring. The red and blue cable have to be connected to the test input or the power supply.
	The detection LED remains green.	The detection field is too small or deactivated. The object size is too small.	1 Check the size of the fields. 2 Launch a teach-in. 1 Decrease the min. object size.
	The detection LED remains red.	Someone or something is in the detection field. The field is touching the floor, the wall or the door, which leads to detection.	1 Step out of the field and/or remove the any object(s) from the field. 1 Activate the 3 red beams and check if the position of the sensor is correct. If not, adjust the hex screws. 2 Verify the field size. 3 Launch a teach-in.
	The orange LED is flashing and the detection LEDs are red.	No background (reference point) is found. The sensor is masked.	1 Check the position of the sensor. 2 Check the mounting side setting. If there is no background, set the mounting side to value 3 to 5. 3 Launch a new teach-in. 1 Verify and clean the front screens with a damp cloth.
	The orange LED is on.	The power supply voltage is exceeding the acceptable limits. The sensor exceeds its temperature limits. Internal error	1 Check the power supply voltage. 1 Verify the outside temperature where the sensor is installed. Eventually protect the sensor from sunlight using a cover. 1 Wait a few seconds. If the LED remains ON, reset the power supply. If the LED turns on again, replace the sensor.
	The sensor does not respond to the remote control.	30 minutes after last use of the remote control, the sensor locks the access to the remote control session. The batteries in the remote control are not installed properly or dead. The remote control is badly pointed. A reflective object is in close proximity to the sensor.	1 Cut and restore power supply. The remote control session is accessible again during 30 minutes. 1 Verify or replace the batteries. 1 Point the remote control towards the sensor, but with a slight angle. The RC should not be pointed in a right angle in front of the sensor. 1 Avoid highly reflective material in proximity to the sensor.
	The sensor does not unlock.	You have to enter a code or the wrong code was entered.	1 Please contact BEA.

TECHNICAL SPECIFICATIONS

Technology:	laser scanner, time-of-flight measurement
Detection mode:	movement and presence
Detection range:	default: 10 m x 10 m @ 2% remission factor* max: 25 m x 25 m
Angular resolution:	0.3516 °
Min. detected object size (typ.):	2.1 cm @ 3 m; 3.5 cm @ 5 m; 7 cm @ 10 m; 17.5 cm @ 25 m (in proportion to object distance)
Emission characteristics:	(IEC/EN 60825-1) IR laser: wavelength 905 nm; output power <0.10mW (CLASS 1) Red visible laser: wavelength 635 nm; output power <1 mW (CLASS 2)
Supply voltage:	10-35 V DC @ sensor side (to be operated from SELV compatible power suppliers only)
Power consumption:	< 5 W
Peak current at power-on:	1.8 A (max. 80 ms @ 35 V)
Cable length:	10 m
Response time:	typ 20 ms; max. 80 ms (+ output activation delay)
Output:	2 electronic relays (galvanic isolated - polarity free) Max. switching voltage: 35 V DC / 24 V AC Max. switching current: 80 mA (resistive) Switching time: $t_{ON}=5$ ms; $t_{OFF}=5$ ms Output resistance: typ 30 Ω Voltage drop on output: < 0.7 V @ 20 mA Leakage current: < 10 μA
Input:	2 optocouplers (galvanic isolated - polarity free) Max. contact voltage: 30 V DC (over-voltage protected) Voltage threshold: Log. H: >8 V DC; Log. L: <3 V DC
Response time monitoring input:	< 5 ms
LED-signal:	1 blue LED: power-on status 1 orange LED: error status 2 bi-coloured LEDs: detection/output status (green: no detection; red: detection)
Dimensions:	125 mm (D) x 93 mm (W) x 70 mm (H) (mounting bracket + 14 mm)
Material:	PC/ASA
Colour:	black or white
Mounting angles on bracket:	-45 °, 0 °, 45 °
Rotation angles on bracket:	-5 ° to +5 ° (lockable)
Tilt angles on bracket:	-3 ° to +3 °
Protection degree:	IP65
Temperature range:	-30 °C to +60 °C if powered; -10 °C to +60 °C unpowered
Humidity:	0-95 % non-condensing
Vibrations:	< 2 G
Pollution on front screens:	max. 30 %; homogenous
Conformity:	IEC/EN 60825-1 IEC/EN 61000-6-2 EMC - Industrial level - immunity IEC/EN 61000-6-3 EMC - Commercial level - emission

Specifications are subject to changes without prior notice.
All values measured in specific conditions.

*For other options, please contact BEA



BEA hereby declares that the LZR®-S600 is in conformity with the European directives 2014/30/EU and 2011/65/EU.

The complete declaration of conformity is available on our website.

This product should be disposed of separately from unsorted municipal waste

